
JB11 / JB11A

## AIR JACKING BEAM SPARE PARTS

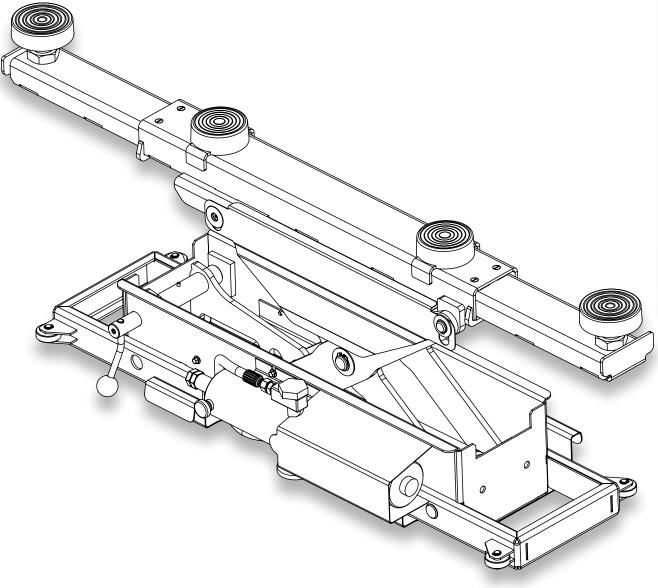






## **TO ORDER**

To order spare parts or accessories, simply call **1300 MOLNAR** [665 627] in Australia +61 8 7120 8700 for International callers email **spareparts@molnarhoists.com.au** or log onto **www.molnarhoists.com.au** 



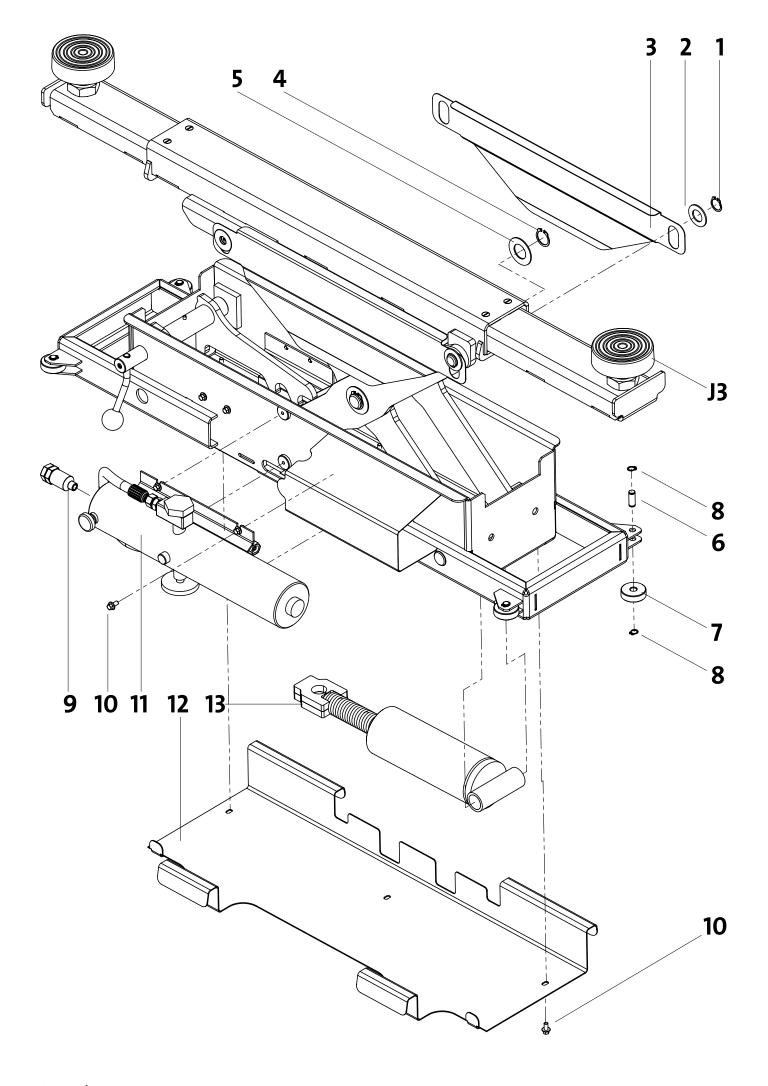



ITEM	Part description	Spare Part Number
1	CIRCLIP 20 mm (D1400-020)	1012012
2	Washer Flat 20 mm	1017006
3	Cover Plate, Side	32A31011
4	CIRCLIP 25 mm (D1400-0250)	1012013
5	Washer Flat 25 mm	1017005
6	Pin, Guide Roller	JB87-42
7	Guide Roller	JB87-43
8	CIRCLIP 10 mm (DIN 471-10)	85A-J-46
9	Inline Air Filter Complete	SL02-147
10	Во <b>гт М6 x 12 mm</b>	85A-D-11
11	Pump Assembly	32A24002
12	Cover Plate, Bottom	32A31012
13	Cylinder Assembly	32A24001
<u>J3</u>	Pick Up Pad, Small	J3



## **Accessories**

PL92-RB Rubber Block, Standard		Solid rubber block for cushioned lifting For use on Rubber Block Nest	Length 150 mm Width 100 mm Height 70 mm
PL92-RB-40 RUBBER BLOCK, LOW PRO_LE		For vehicles with low clearance For use on Rubber Block Nest	Length 150 mm Width 100 mm Height 40 mm
<b>SLO2-NEST</b> RUBBER BLOCK NEST	1	Nest to house rubber blocks	Length 160 mm Width 100 mm Height 120 mm
<b>J3BP</b> Beam Pad		Stabilises vehicles on beams Made from solid, long- lasting vulcanised rubber	Diameter 90 mm Pad Height 30 mm
<b>J3</b> Pick Up Pad, Small	9	Supports and stabilises vehicle	Diameter 100 mm  Height - min 30 mm  Height - max 80 mm
<b>EXT-PAD</b> BEAM RISER, STANDARD	Ā	Provides valuable extra clearance for four-wheel- drives and vans	Length 120 mm Width 100 mm Height-min 170 mm Height-max 215 mm
<b>EXT-PAD-LOW</b> BEAM RISER, LOWERED	<b>—</b>	For vehicles with low clearance	Length 120 mm Width 100 mm Height - min 140 mm Height - max 175 mm
<b>AXLE-PU</b> BEAM RISER, AXLE	X	For stable pick-up on axle; cradle head prevents lateral movement	Length 120 mm Width 100 mm Height - min 150 mm Height - max 205 mm



## **WARRANTY**

All Molnar Hoists products are made in Australia and built to the highest safety standards.

Our commitment to excellence is backed by our warranty on products and genuine parts – matching our manufacturing excellence with superior service assurance.

Molnar Hoists will repair or replace defective product in accordance with our standard Warranty terms and conditions in effect at the time of purchase. Simply contact your local authorised dealer or Molnar Hoists to initiate a warranty claim.

A copy of our complete Warranty Statement is available to download from our website www.molnarhoists.com.au







For more information, please contact us or your local Molnar Representative

16-20 Coglin Street Brompton SA 5007 Australia

T 08 7120 8700 F 08 8346 0097 E info@molnarhoists.com.au

www.molnarhoists.com.au

onwards & upwards