




3 T Siccor lift

Operation and maintenance


instructions

(TRANSLATED VERSION)

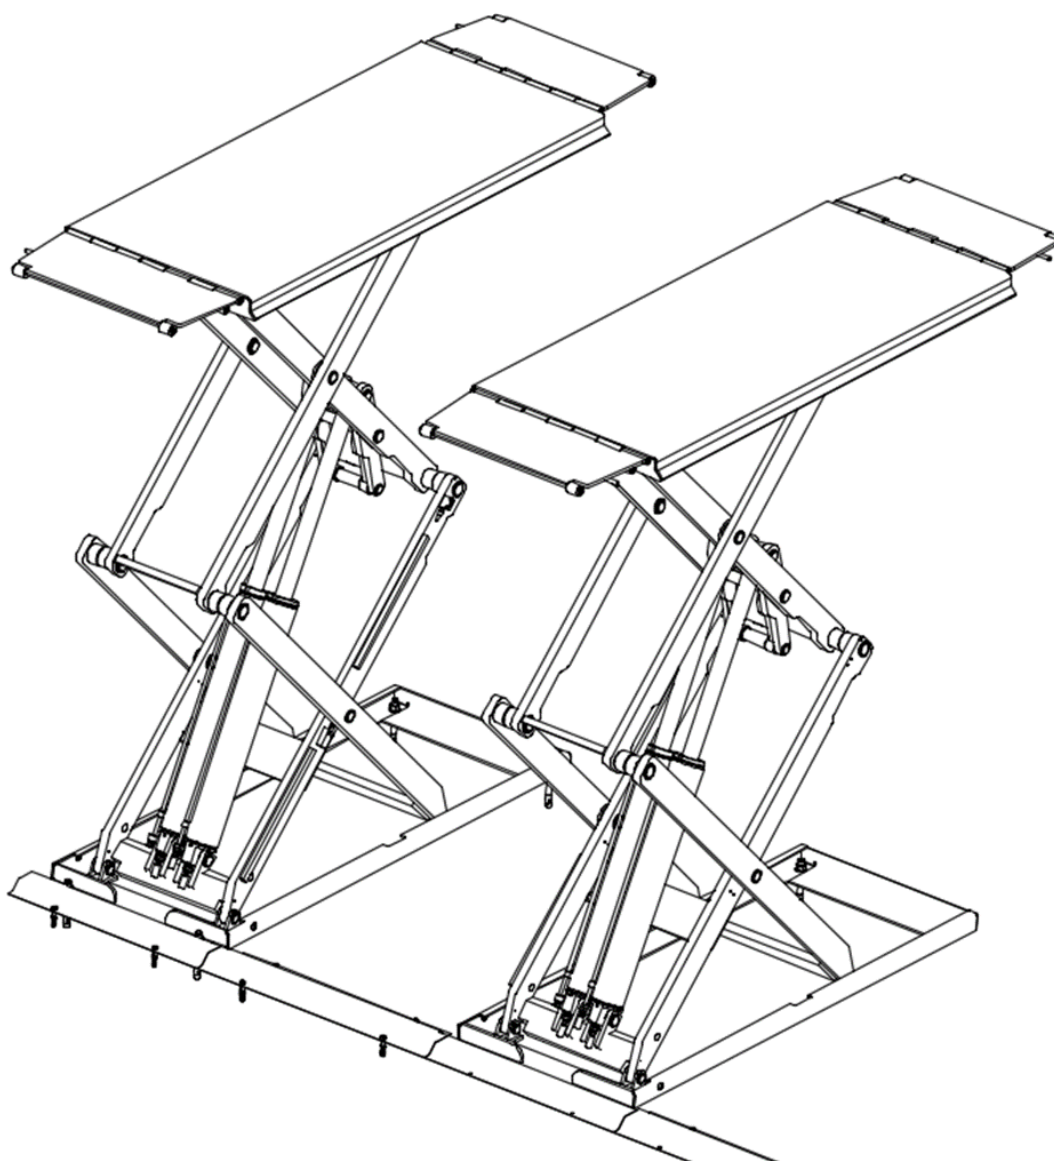

Always keep this document!

Must be read before using your equipment!

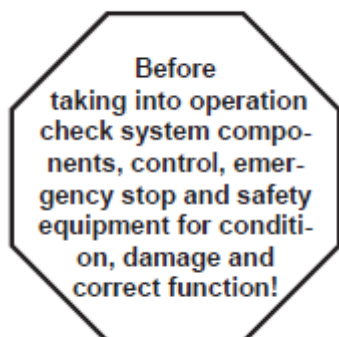

© Stenhøj A/S

Barrit Langgade 188-190

DK-7150 Barrit

Tel.: + 45 76 82 13 30

Fax.: + 45 76 82 13 31

E-mail: info@autopstenhoj.com

Table of contents	
1 General	4
1.1 Information about the operating manual	4
1.2 Explanation of symbols	4
1.3 Warranty and liability	5
1.4 Spare parts	5
1.5 Copyright protection	6
1.6 Waste disposal	6
2 Safety	6
2.1 General	6
2.2 Customer's responsibility	8
2.3 Intended use	8
2.4 Work safety	9
2.5 Personal safety equipment	9
2.6 Dangers which may arise from the machine	9
2.7 Operating personnel	10
2.8 Behavior in case of danger or accidents	10
2.8.1 Preventive measures	10
2.8.2 If the worst comes to the worst: Do the right things!	10
3. Technical data	11
3.1 Type designation	11
3.2 Name plate	11
3.3 Load distribution	11
3.4 Technical specifications	12
4. Structure and function	14
4.1 Description	14
4.3 Symbols of short operating instructions	15
5 Transport, packing and storage	16
5.1 Safety notes	16
5.2 Transport inspection	16
5.3 Packaging	16
5.4 Storage	17
6 Installation and start-up	17
6.1 Installation	17
6.2 Start-up	17
6.3 Instructions for start-up and bleeding	18
7 Operation	19
7.1 Safety	19
7.2 Operation:	19
7.3 Emergency lowering:	20
7.4 Adjustment of top limit switch:	21
8 Maintenance	22
8.1 Safety	22
8.2 Intervals for preventive maintenance	23
8.3 Bleeding	23
8.4 Cleaning:	24
9 Inspections	24
10. Malfunctions	25
10.1 Actions in case of malfunctions	25
10.2 Trouble shooting chart	25
11. Service	26
11.1 Spare parts ordering	26
12. Oil specifications	27
13 Overview: Electrical diagrams	28
14 Overview: Hydraulic diagrams	28

1 General

1.1 Information about the operating manual

This operating manual describes the installation, operation and maintenance of the machine.

Strict compliance with all the specified notes on safety and instructions is essential for safe working and proper

handling of the equipment.

Apart from that, all accident prevention instructions valid at the place of use and the general safety regulations

must also be adhered to.

This operating manual is part of the product and should always be kept in the immediate vicinity of the machine,

accessible for the personnel entrusted with installation, operation, maintenance and cleaning.

For better representation of the explanations, the graphical artwork in this manual is not strictly according to

scale, but may slightly vary from the actual design of the machine.

The operating manuals of the supporting components apply alongside this operating manual.

Please observe the notes contained therein - especially the safety notes.



1.2 Explanation of symbols

Important safety and machine-technical notes in this operating manual are marked with symbols. The notes must be adhered to in order to avoid accidents, personal injuries and damage to property.



WARNING!

This symbolizes dangers that can lead to adverse effects on health, injuries, permanent physical damage or to death.

Adhere at all costs to the notes specified regarding work safety, and be particularly careful in these cases.



WARNING! Danger of electric current!

This symbol draws attention to dangerous situations involving electrical currents. There is a danger of serious injury or death if the safety notes are not complied with. The work may only be carried out by qualified electricians.



ATTENTION!

This symbolizes notes, which if not complied with, can lead to damages, malfunctions and/or breakdown of the machine.

NOTE!

1.3 Warranty and liability

All information and notes in this operation manual are provided under due consideration of valid regulations, the

latest technical status of development as well as our years of expertise and experience.

The translation of this operation manual has also been made to the best of our knowledge.

We do not accept any liability for errors in translation. The version marked of the operation manual marked with

“Original version” on the front page of the operation manual supplied with the lift shall be binding.

For optional design versions, the use of additional ordering options or the implementation of the latest technical

modifications the actual scope of delivery may differ from the descriptions and illustrations in this manual. If you

have any questions please contact the manufacturer.



NOTE!

This operation manual must be thoroughly read before starting any work with the equipment, especially before

commissioning ! The manufacturer assumes no liability for damages or disruptions that occur as a result of non-compliance with the operation manual.

This operation manual must be kept at the lift and accessible for all persons working on or with the lift. Handing

over the manual to third party is not permitted and is subject for compensation. Further rights remain reserved.

We reserve the right to technical changes to the product within the framework of improving the usability and

further development.

This lift is guaranteed, covering faults due to manufacturing or material defects, provided that the installation,

operation and maintenance instructions are observed. The warranty implies that during the warranty period the

manufacturer is committed either to repair or to replace – after own decision - defective spare parts fitted

1.5 Copyright protection

This operating manual is to be treated as confidential. It is solely intended for persons having to work on or with the equipment. Passing this operating manual on to third parties without a written confirmation is not permitted.

If this should be required, please contact the manufacturer.

NOTE!

Contents, texts, drawings, pictures and other representations are protected by copyright law and are subject to further commercial protection rights. Any misuse is punishable.

Reproduction of any kind - even in form of excerpts - as well as the utilization and/or disclosure of its content without the written consent of the manufacturer is not permitted.

Violations oblige to compensation. Further rights remain reserved.

1.6 Waste disposal

If no agreement concerning take-back or waste disposal has been made, disassembled components must be passed on for recycling after correct dismantling:

- Metal material residues must be scrapped
- Plastic elements must be forwarded for recycling of plastics
- Other components must be sorted by material properties

ATTENTION!

Electric scrap, electronic components, lubricants and other auxiliary materials must be treated as hazardous waste and must only be disposed of by specially approved waste disposal companies!

Consumables like greases, oils, conserving and cleansing agents must be removed from the device in a type specific and environmental manner. Use suitable and approved storage containers for the respective consumables.

Mark these containers according to their content, filling level and data and store them until final waste disposal in such a way, that any accidental use is ruled out.

2 Safety

This section offers an overview of all important safety aspects for an optimal protection of personnel against danger and ensures safe and disruption-free operation of the machine.

In addition to this, concrete notes on safety to avert danger are provided and marked with symbols in the individual

chapters. Furthermore, any pictograms, signs and labels on the machine are to be observed and kept legible at all times.

2.1 General

At the time of development and manufacture the equipment complies with the valid and established technical

Declaration of conformity

In accordance with the machine Directive 2006/42/EC, Annex II A

3T. scissor lift




Manufacturer: Stenhøj A/S
Barrit Langgade 188-190
DK-7150 Barrit

TEL: +45 76 82 13 30
FAX: +45 76 82 13 31
CVR-nr. 16 92 61 91

We hereby declare that the mentioned machine, by its design and construction and equivalent with the version put on the market by us complies with the essential fundamental health and safety requirements. In case of any modification in the machine unapproved by us this certificate becomes void.

Type: scissor lift

Name plate:
(duplicate)

 Stenhøj A/S Langgade 188-190 DK- 7150 Barrit		
Type:	Cap.:	
Model:	Year:	
Approval no.:		
Serial no:		

Relevant EC- Directives:

- Machinery Directives 2006/42/EC
- Electromagnetic Compatibility Directive 2014/30/EU

Harmonized standards applied:

- EN 1493:2010
- EN 12100: 2011
- EN 60204: 2006
- EN ISO 13849- 1: 2015

Responsible for documentation: Søren Madsen, Barrit Langgade 188-190 DK- 7150 Barrit

Place, date Barrit

Signature:



Signer information:

Kristian Daugaard, PTA Chef

2.2 Customer's responsibility

This operating manual should always be kept in the immediate vicinity of the machine, accessible for the personnel entrusted with installation, operation, maintenance and cleaning.

The machine must only be operated in technically perfect and safe condition.

Always ensure free access to all safety features and check these at regular intervals.

Details concerning industrial safety refer to directives of the European Union valid at the time the machine was manufactured. The customer is obliged to determine compliance of work safety measures specified with the current status of legal statutes and to observe any new regulations over the entire period in which the machine is used. Outside of the European Union, the laws on industrial safety and regional directives and regulations valid at the place of use of the machine are to be complied with.

The generally valid notes on industrial safety and accident prevention instructions as well as the valid environmental protection regulations applicable at the place of use are to be observed and adhered to alongside the notes on industrial safety in this operating manual.

The customer and personnel authorized by him/her are responsible for the disruption-free operation of the machine as well as for unambiguous determination of responsibilities during installation, operation, maintenance and cleaning of the machine.

Details of the operating manual are complete and must be adhered to without limitation!

Furthermore, the customer must also ensure that:

- Other dangers that result from special working conditions at the place of use are determined in a risk assessment.
- All other instructions and notes on safety that result from the risk assessment of workplaces on the machine are summarized in operating instructions.

2.3 Intended use

Operational safety is only guaranteed when adhering to the intended use of the device.

This lifting device is specially developed to lift motor cars and we strongly recommend not to lift any other equipment with this automotive lift.

The lifting platform has been designed and built for the use inside workshops.

Use of the lift for undersealing of cars and car wash is not allowed.

Riding, climbing and/or standing on the lifting platform as well as using it for lifting or lowering loads other than the ones specified above or installing and operating it outside in an unprotected environment is prohibited.

ATTENTION!

Any other use of the device that differs from this or exceeds this is prohibited and is not considered unintended use!

Claims of any kind against the manufacturer and/or his authorized representatives resulting from damage caused by unintended use of the device are excluded. The customer is solely liable for any damage occurring during unintended use.

Intended use also includes correct adherence to assembly, operating, maintenance and cleaning instructions.

2.4 Work safety

Compliance with the notes on safety can help to avoid personal injury and material damage when working on the machine. Failure to comply with these notes will cause a considerably risk of injury for persons and danger of damage or destruction of the machine.

Non-compliance with the safety regulations causes the exclusion of any liability or compensation claims against the manufacturer or his representative.

2.5 Personal safety equipment

In principle, the following is to be worn when working on or with the machine:

Protective working clothes

Tight fitting work clothing (minimal tear strength, no wide sleeves, no rings or other jewelers etc.)

Safety gloves

Safety boots

for protection against heavy falling down objects and slipping on non-skid proof ground



2.6 Dangers which may arise from the machine

The machine was subjected to a risk analysis. The resultant construction and design of the machine corresponds to the current status of technology.

However, certain remaining risks cannot be avoided!

This device works with electrical voltage.

WARNING! Danger of electric current!

Electrical power can cause severe injuries. There is a danger to life caused by electric current if the insulation or individual components are damaged.

Switch off the main switch and secure against switching on again before maintenance, cleaning or repair work.

Switch off the power supply before starting work in the electrical system and make sure that the system is dead.

Do not remove any safety features or do not modify such installations in a way that would adversely affect their function.

The equipment is supported by hydraulic components.

WARNING! Danger of injury!

Hydraulic power can cause severe injuries. In case of damage to individual components fluid may escape under high pressure and cause injury and material damage!

Always relieve all pressures before starting work in the hydraulic system.

Do not remove any safety features or make them inoperative as a result of modifications.

Do not change any pressure settings beyond the values specified in this operating manual.

2.7 Operating personnel

The device must only be operated and serviced by authorized, trained and instructed expert persons who:

- are at least 18 years of age and
- have been thoroughly instructed in operation and
- can provide evidence of their suitability to operate lifting platforms and
- have been entrusted in writing by the operating company to operate the lifting platform

An instructed person is someone who has been trained and, if necessary, instructed practically in the tasks entrusted to him/her and the possible dangers resulting from improper actions; and who has been instructed both about the necessary protective features and about protective measures.

Qualified personnel include those who can assess the work entrusted to them and recognize potential dangers based on their specialist training, knowledge and experience as well as their knowledge of appropriate conditions.

If personnel do not have the necessary knowledge, then they are to be trained accordingly.

The equipment must only be operated and serviced by persons who are able to perform their work in a reliable manner. For this purpose, any mode of operation that adversely affects the safety of persons, the environment or the machine is to be avoided. Persons who are under the influence of drugs, alcohol or medication that affects their responsiveness may under no circumstances carry out work on or with the machine.

The employment of personnel must be based on the applicable regulations concerning age and qualification.

The responsibilities concerning operation and maintenance must be clearly specified in order to avoid uncertainties in competence.

The operator must ensure that unauthorized persons keep a sufficient clearance to the equipment.

The operator is obliged to report immediately any changes to the equipment which adversely affect the safety to the operator.

2.8 Behavior in case of danger or accidents

2.8.1 Preventive measures

- Always be prepared for accidents or fire !
- Keep first aid equipment (first aid kit, blankets, etc.) and firefighting equipment close to hand.
- Make personnel familiar with the location and use of safety, accident reporting, first aid and rescue equipment and have this training confirmed.
- Clear access routes for rescue vehicles.

2.8.2 If the worst comes to the worst: Do the right things!

- Shut down the machine immediately.
- Inform the responsible person at the place of use.
- Alarm a physician and the fire brigade.
- Rescue persons from the danger zone, start first aid measures.
- Keep access routes for rescue vehicles clear.

3.4 Technical specifications

Max. lifting capacity	3000 kg *
Max. lifting height	1950 mm
Height of platform	105 mm
Length of platform	1490 mm
Width of platform	670 mm
Lifting time	≤45 s
Lowering time	≤40 s
Total length of lift	2040 mm
Total width of lift	2060 mm
Weight	850 kg
Voltage	AC 400V or 230V ± 5% 50Hz or 60Hz
Power	2.2 kw
Hydraulic oil	9 L (see oil specifications)
Working temperature	5-40°C
Air humidity (when working)	30-95%
Noise level	< 76 db
Installatin place	Indoor

*) Full lifting capacity will only be achieved at the height of 270 mm

Motor

Type Y80
 Max power..... 2.2 kw
 Max voltage.....3x230/400V
 Pre-fuses..... at 400V:16A
 at 230V:16A
 Max frequency..... 50Hz / 60Hz
 Speed1350 rpm
 Insulation class.....F
 Protection class..... IP55
 Motor must be connected according to enclosed wiring diagram, direction of rotation is clockwise.

Pump

TypePHC-1
 Modelgear pump
 Max flow (50Hz)..... 4.3 cm³/rev.
 Max flow (60Hz)..... 3.2 cd³/rev.
 continuous working pressure.....230 bar
 Overflow valve pressure set at240 bar**



**) The pressure is set from the factory and must not be changed

Type of vehicle to be lifted on the lift:

This lift is suitable for virtually all vehicles with total weight and with dimensions not exceeding the below data.

Max. dimension of vehicle:

The following diagrams illustrate criteria used to define the operating limits of the lift.

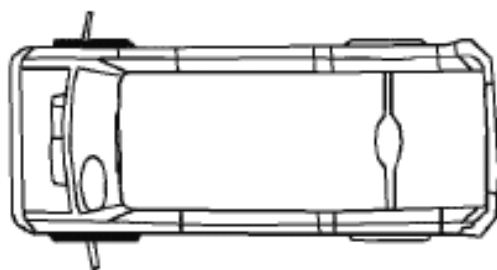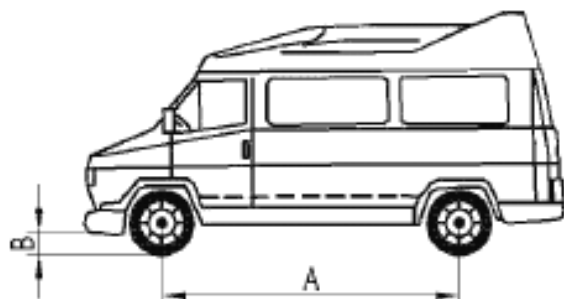

	3,0 T	
	Min. (mm.)	Max. (mm.)
A	1900	4000
B	100	
C		1900
D	900	



On some vehicles the lower parts of the underbody could interfere with structural parts of the lift, for instance particular parts of sports cars.

The lift will also handle customized or non-standard vehicles provided they are within the maximum specified lifting capacity.

Also the personnel safety zone must be defined in relation to vehicle with unusual dimensions.

4. Structure and function

4.1 Description

The MagiX is a scissor lift for 3000 kg capacity, especially suitable for passenger cars and light vans. The lift is operated by means of push buttons and can be stopped at any height between the min height and the max height.

The lift is electro-hydraulic with a double circuit oil system ensuring the lift against unintentional lowering.

All mechanical frames, such as platforms, drive-on ramps, base frames and arms have been built in steel plate to make the frame stiff and strong while keeping a low weight.

Safety functions:


- Dead-man controlled push buttons
- Electronic supervision of critical level difference between scissor members
- Exceed pressure valve in pump unit
- Cylinders equipped with flow restricting valves
- Alarm signal for foot protection
- Lockable main switch / emergency switch

Do not use lift in washing bays, for underbody sealing or in paint shops; nor in areas with explosion danger. Likewise lift must not be used for lifting just part of a vehicle.






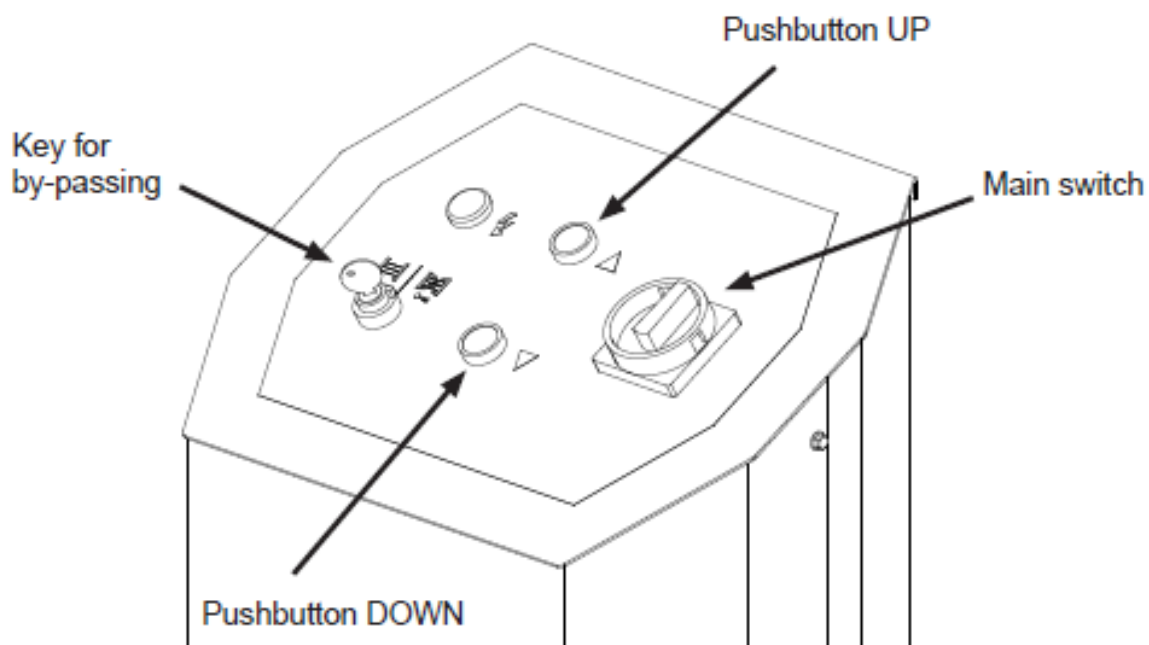


ATTENTION !

Do not - during normal operation - keep the key for the by-passing of photocells together with the control unit.

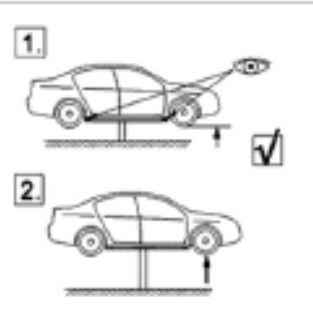

4.3 Symbols of short operating instructions

	<p>The lifting platform must only be operated by authorized persons. Strict compliance with the comprehensive operating manual is mandatory, especially in case of faults</p>
	<p>Climbing up or standing on lifted load or load bearing device is strictly prohibited.</p>
	<p>After slight initial lifting the operator must check that the load is correctly positioned on the load bearing device. Only then the load may be lifted further.</p>
	<p>Always keep an eye on load bearing device and load when moving the lifting platform.</p>
	<p>No persons must be in the movement range of load bearing device or load while the lifting platform is in motion.</p>
	<p>The movement range of load and load bearing device must be kept clear of any obstructions.</p>

5 Transport, packing and storage

5.1 Safety notes



WARNING! Danger of injury!

There is a danger of injury from falling parts when lifting, swinging and lowering.

The machine can be damaged or destroyed by improper transporting.

For this reason, fundamentally observe the following safety notes:

Only use permissible lifting tackle and sling gear with sufficient bearing capacity.

Only secure the machine on the fastening points provided; do not fasten onto projecting machine parts or eyelets of attached components. Make sure the sling gear is secure !

Ropes and chords must be equipped with safety hooks. Do not use any torn or worn ropes. Do not lay ropes and chords on sharp edges and corners, do not knot and do not twist. Pay attention to the centre of gravity of the machine when fastening tackle.

Never lift, swing or lower loads over people.

Always move the machine with the greatest of care and attention.



WARNING! Danger of life!

Suspended loads can fall down and lead to severe injuries. Do not stand or pass under suspended loads when transporting with lifting tackle!

5.2 Transport inspection

Check delivery immediately on receipt for completeness and transport damage.

Do not accept delivery or only accept under proviso if there is externally recognizable transport damage. Note the scope of damage on the transport documents/delivery note of the carrier. Start complaints procedure.

Complain about hidden deficiencies as soon as they are discovered as compensation claims can only be asserted within the applicable complaints period.

5.3 Packaging

If there is no returns agreement for the packaging, separate materials according to type and size and direct to further use or re-cycling.



ATTENTION!

Always dispose of packaging materials in an environmentally friendly manner and in accordance with the applicable, local disposal guidelines. If necessary, commission a re-cycling company.



NOTE! Good for environmental protection!

Packaging materials are valuable raw materials and can continue to be used in many cases or sensibly reconditioned and re-cycled.

5.4 Storage

Keep packed goods packed up until installation and store such items as specified on the externally attached installation and storage information.

Store packing units only under the following conditions:

- Do not keep in the open-air.
- Store in a dry and dust-free environment.
- Do not subject to aggressive media.
- Protect against direct sunlight.
- Avoid mechanical vibrations.
- Storage temperature: 15 to 25 °C
- Relative humidity: max. 60 %
- For longer periods of storage (> 3 months), check the general condition of all parts and the packaging at regular intervals. If necessary touch up or renew the conservation.

6 Installation and start-up

6.1 Installation

In order to come up to your expectations now and in the future the lift must be installed in strict accordance with the installation instructions and maintained according to our recommendations.

As agreed, the equipment will be installed by employees of the manufacturer or by authorized partner companies.

Unauthorized assembly or installation work is not permitted.



WARNING! Danger of injury!

Improper installation and assembly can lead to severe personal injury and/or material damage. Installation and assembly work may only be carried out by trained technical staff while observing the safety instructions.

Contact your distributor for the name and address of the nearest authorized service shop.

6.2 Start-up

As agreed, initial start-up of the equipment will be carried out by employees of the manufacturer or by authorized partner companies.

Unauthorized initial start-up is not permitted.

The machine is handed over to the customer following set-up, initial start-up and implementation of test runs by the manufacturer. After this the machine can be operated in strict compliance with the information in the operating instructions.



WARNING! Danger of injury!


Start-up may only be carried out by qualified technical personnel while observing the safety instructions.

6.3 Instructions for start-up and bleeding

NOTE: These operations must be performed without load

1. Turn main switch onto ON.
2. Fill tank with oil.
3. Check that all valves are completely closed.
4. Push UP button until max height is reached. If lift does not move, check motor: if motor is spinning, check if direction of rotation is correct; otherwise, invert phases on the electric line.
5. Put sufficient oil into the tank to execute the bleeding procedure.
6. Push **EF** button, which is located inside the power unit, and by-pass top limit switch, push UP button in pulses of 2-3 seconds until hydraulic circuit is full. **It is very important to keep pulsing UP button until oil returns to tank through both return hoses. When lift has been raised to top position, i.e. above top limit switch, oil level in the tank must be at 10 cm.**
7. When oil level in tank is calm (i.e. no longer sinks), the procedure is completed. This operation makes self-bleeding of cylinders and self-levelling of scissor members possible. **Lower scissor members to bottom position and bleeding procedure has to be repeated from bottom position, as described in step 6, at least 3 times.**
8. Operate lift up and down from bottom to top position a few times, without load. If scissor members are at level, bleeding procedure has been fulfilled. If not, repeat procedure at step 6 - 7.
9. After checking that the lift is well aligned (max. difference allowed is 1 cm at the beginning/ending), it can be loaded and operated.

! **NOTE:** OVER TIME AN UN-LEVELLING OF THE SCISSOR MEMBERS COULD OCCUR, DUE TO MINOR OIL LEAKS IN THE HYDRAULIC CIRCUIT. IN THIS CASE, THE BLEEDING PROCEDURE HAS TO BE REPEATED AS FROM STEP 6, ALWAYS **WITHOUT LOAD**.

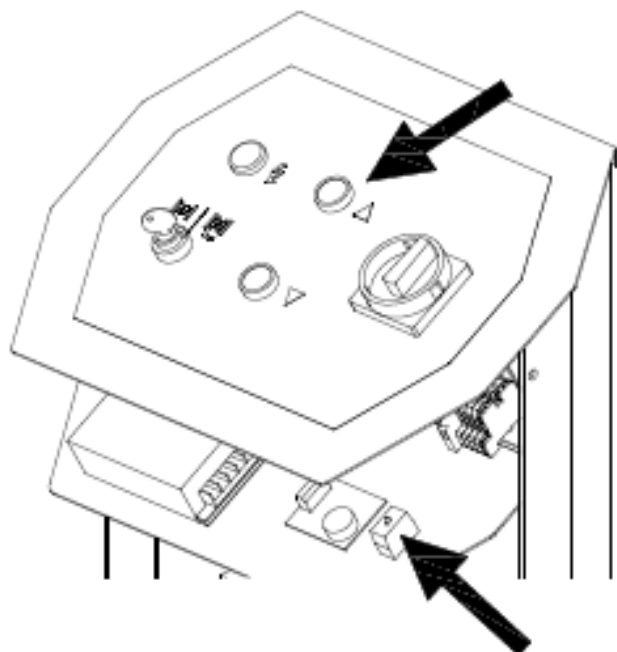

7 Operation

7.1 Safety

Please read the paragraphs “Work safety”, “Personal safety equipment” and “Operating personnel”.

WARNING! Danger of injury!

During lifting and lowering movements the lifting platform generates dangers which could lead to severe injury, such as crushing or shearing off of limbs or by heavy objects slipping off or falling down.

In order to avoid accidents the following should be noted when operating lifting platforms:


- During the up or down movement of the lifting platform the danger zone and the immediate vicinity of the lifting platform should be free of persons. The distance between persons and the lifting platform should be at least 2 m.
- Accessing the load bearing devices, riding on, climbing onto and standing on the lifted platform is strictly prohibited.
- Do not load the lifting platform beyond the max. permitted load bearing capacity.
- Observe the permitted load distribution (see section “Technical Data”).
- Load the lifting platform evenly. Possible shifting of the vehicle's centre of gravity caused by the disassembly of vehicle components must be taken into account.
- Do not initiate any vibration of the lifting platform while performing assembly work on the vehicle.
- Always keep the main switch locked to avoid unauthorized operation and unintended switching on.

7.2 Operation:

Placing of vehicle:


- The lift must be lowered to absolute bottom position, with drive-on ramps on the floor.
- Vehicle must be driven straight on to the lift, so that upper plates are loaded in center line – re-position vehicle if necessary. It is very important to respect this point.
- **IMPORTANT !** The drive-in direction shown has to be respected (see dimension sketch or installation manual)
- If drive-on ramps are used check that ratchet on underside is fully engaged.
- Place rubber blocks corresponding to lifting points of vehicle.

Raising:




- Check once again that lift is loaded on center line of upper plates.
- Check that no persons, tools, equipment or the like are in immediate vicinity of vehicle or lift.
- Push UP button . Raise vehicle app. 100 mm and check that it is correctly and stably supported.
- Raise vehicle to working height. Keep an eye on vehicle and lift during the entire lifting movement.


Working on vehicle:

- Make sure that vehicle stays stable during work; especially in case heavy items (motor/rear axle) are removed from vehicle.

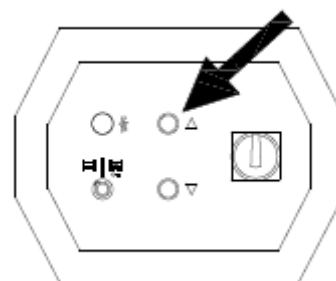


Lowering:

- Check that no persons, tools, equipment or the like are in immediate vicinity of vehicle or lift.
- Push DOWN button ; lift will lower. Keep an eye on both vehicle and lift during the entire lowering movement.
- In a height of app. 330 mm lowering stops, and an alarm signal is activated. Let go of DOWN button  and check that no persons or other items are in immediate vicinity of the vehicle and lift.
- Lowering continues when pushing DOWN  again. The alarm signal continues during the remaining part of lowering movement.
- Remove rubber blocks when lift is in bottom position and lower drive-on ramps - if they have been used - by lifting up ramps until ratchets on underside are released.

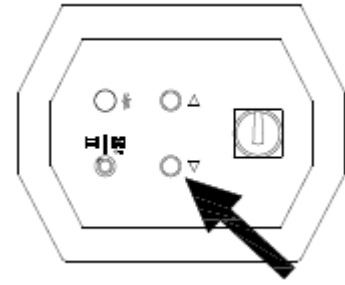**7.3 Emergency lowering:****WARNING !**

During emergency lowering all normal safety functions are out of operation. Therefore proceed with utmost caution and consideration during the entire procedure.

- Turn off main switch
- Remove front plate for upright
- Push down valves (B and C)
- Turn thumb screw (A), to loosen it. Lift will now lower to bottom position.
- When lift has reached bottom position re-tighten thumb screw (A).

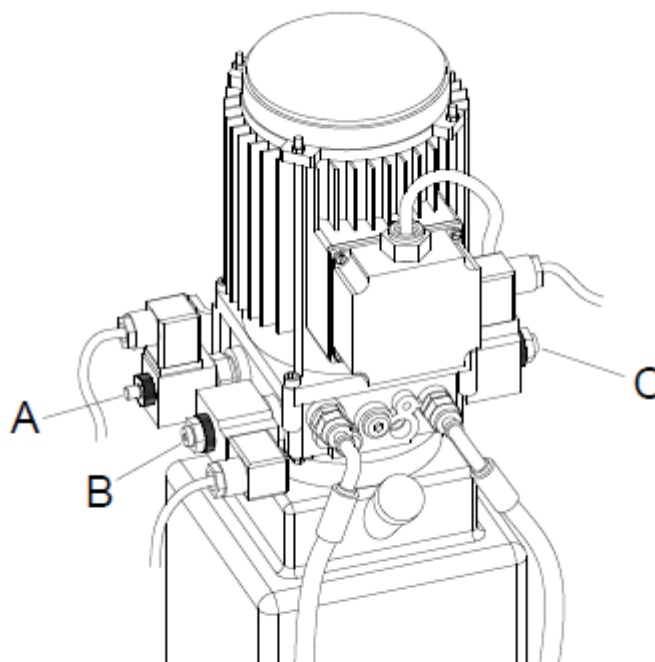


7.4 Adjustment of top limit switch:

Raise lift to 1950 mm.

Turn cam disc on left scissor member (according to drive-on direction) until breaking switch is activated; tighten afterwards pointed screws on cam disc.

Raise and lower lift a couple of times and check once again that height still is 1950 mm.

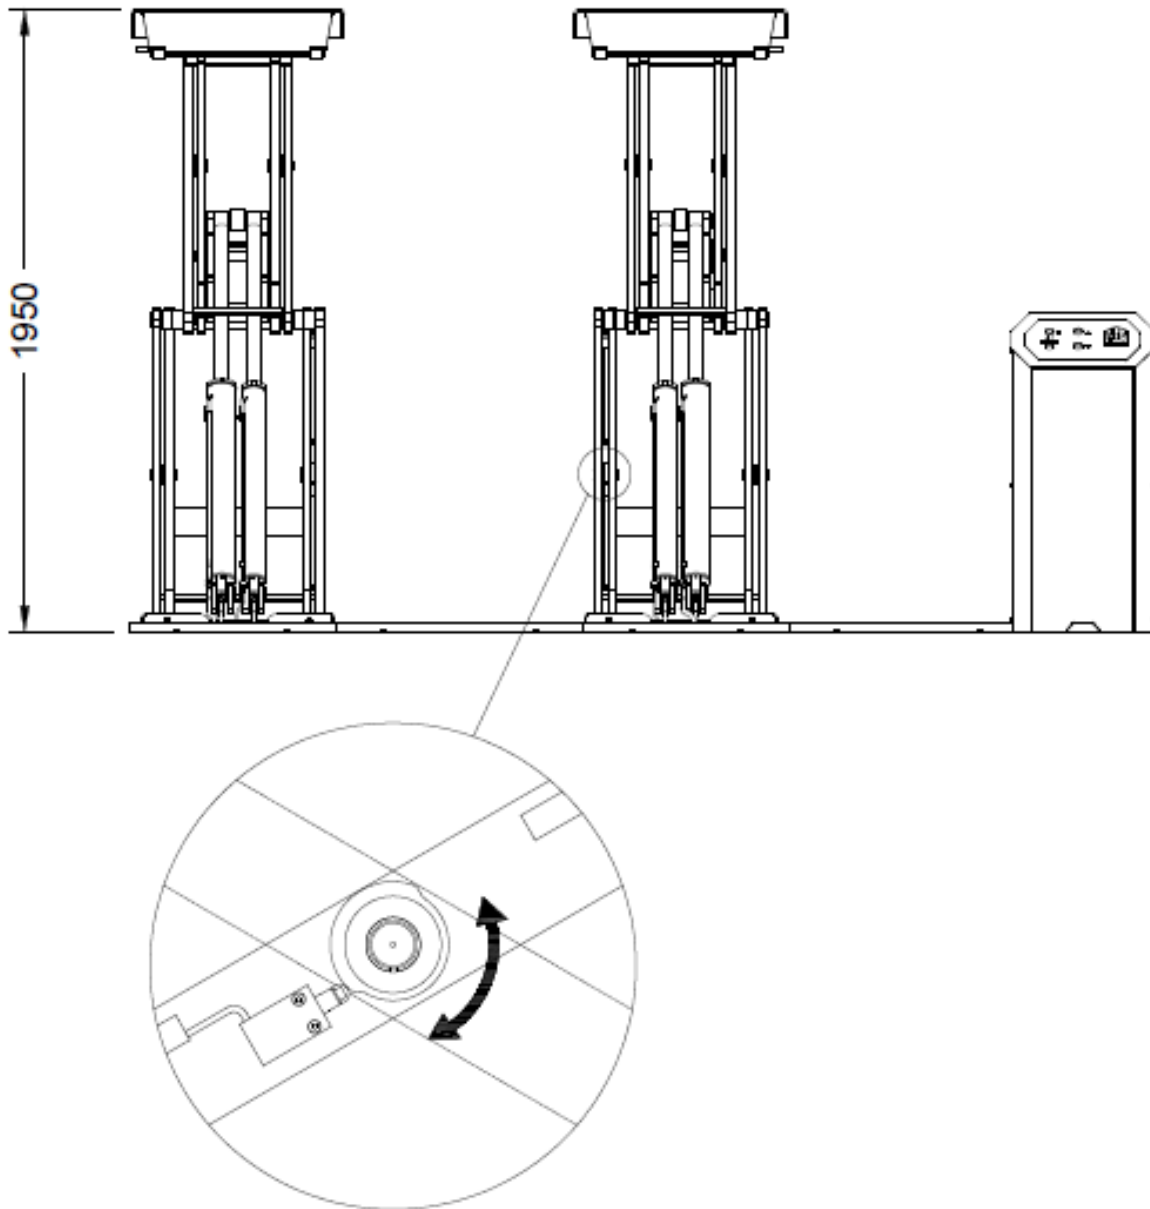

8 Maintenance

8.1 Safety



WARNING! Danger of injury!

Improperly performed maintenance work can lead to severe physical injury or damage to property. Any work related with care and maintenance must only be carried out by qualified and authorized expert personnel.

Strictly observe when performing maintenance work:

- Switch off the system and secure against switching on again.
- Perform work only with the device stopped.
- Secure movable parts against unintended movement.
- See paragraph “Personal safety equipment”



WARNING! Poisoning hazard!

Lubricants are harmful to health! Skin damage (rashes, inflammation, allergies, etc.) can occur on contact of skin with oils and lubricating greases.

Therefore:

- Please observe instructions and safety data sheets from the manufacturer !
- Lubricants are not to be consumed or swallowed. In case of unintended consumption seek medical advice immediately (bring along the packing).
- When handling lubricants, use suitable skin protective and skin-care products or oil-resistance gloves.
- Rinse any spatters in the eye immediately with a lot of water!
- If the skin is dirtied by any lubricants, wash off immediately with soap and water.



WARNING! Danger of injury!

Lubricants which fall on the ground are a source of danger as they present a risk of slipping. Lubricants are to be adsorbed and removed by spreading sawdust or oil adsorption and afterwards scrapped according to local environment regulation.

8.2 Intervals for preventive maintenance

Lift should be checked at shorter intervals if used a lot.

Intervals	Action
At every lifting movement	<ul style="list-style-type: none"> • Check that no loose items (e.g. screws, spare parts, stones, etc.) are lying on bed plate of lift or under drive-on ramps. These might cause great damage on lift. • Check that alarm signal works and is audible. • Clean lifting platforms, rubber blocks and area around lift.
Every week	<ul style="list-style-type: none"> • Lubricate all bushings and hinges with oil.
Every month	<ul style="list-style-type: none"> • Clean upper and lower sliding blocks and lubricate with grease.
Every 3 months	<ul style="list-style-type: none"> • Check oil level on pump unit. Dip stick must show 0-10 mm when lift is in bottom position. See oil specifications at end of present manual. • Change oil on pump unit after first 3 months of operation. • Check hydraulic system visually for leakages.
Every 6 months	<ul style="list-style-type: none"> • Bleed lift (see below).
Every 12 months	<ul style="list-style-type: none"> • Complete overhaul to be carried out by authorized service engineer. • Check visually that no locking rings, screws, etc. are loose or missing. • Change oil on pump unit. • Re-tighten expansion bolts with 80 Nm torque.


8.3 Bleeding

Push UP-button and by-passing button (on the component plate in control unit) to raise lift to max height, whereby the cylinders are filled up with oil and air is "driven" out the system. Lower lift again to bottom position by pushing DOWN-button.

Repeat this step as often as necessary to be sure that cylinders have been filled up and all air has been expelled from the system.

Check oil level and fill up if necessary.

Repeat this procedure once every 6 months.

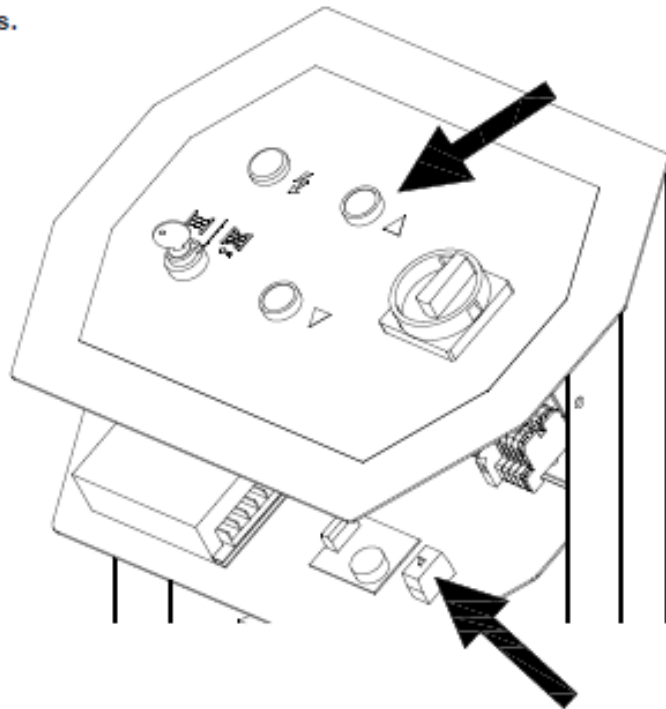

8.4 Cleaning:

Cleaning of lifts to prevent corrosion damages.

Corrosive fluids as brake fluid, oil, fuel or other solvents must be wiped off immediately, otherwise damage will occur to the coating.

Special attention must be paid to the corrosive effect of salt in fall and winter periods.

The cleansing agents must not have any abrasive effect, nor contain solvents.

The lift must be cleaned at least once a week.

The lift must be cleaned with a non-corrosive cleansing agent.

Clean and wipe the lift according to the following scheme:

When:	Where:	How:	Remarks:
Every week	Platforms	Clean and wipe	
	Scissor arms		
	Drive-on ramps		

The manufacturer does not accept any claim concerning the paint peeling off or corrosion damages caused by missing or insufficient cleaning or maintenance.

Repair of damages:

Repair of damages on the coating must be carried out immediately in order to minimize the extent of the repair.

The damages will typically be:

Damages which do not affect the metal surface but affects the coating itself

Damages going down into the metal surface.

Repairs:

Contact the manufacturer for guidance.

Please state RAL number of paint.

9 Inspections

Before commissioning the lift must be inspected according to the local national health and safety regulations.

Operational safety and reliability can only be guaranteed when the condition and function of the lift are inspected at regular intervals – still according to the local national safety regulations.

10. Malfunctions

10.1 Actions in case of malfunctions

In case of breakdown check the following points:

1. Electricity cut
2. Main fuses
3. Electric motor
4. Obstruction under lift

If these points are found in order but the lift is still not working, the safety system has probably been activated, and the lift must not be started or repaired by unqualified staff. Contact the nearest authorized service shop.

Do not start repairing the lift until the main switch has been cut off.

Do not disconnect the safety system and do not operate the lift after breakdown and prior to repair.

10.2 Trouble shooting chart

Symptom:	Possible cause:	Solution:
Lift does not work	The main switch is not turned on	Turn on switch
	There is no power	Check power supply
	Power connection not correct.	Check power connection
	Main contactor does not draw	Contact authorized service engineer
	Height difference between platforms too big (photocells are not aligned)	Contact authorized service engineer
	Electrical wires are disconnected	Replace
	Fuses are blown	Replace
Lift does not raise	Rotation direction of motor is not correct	Interchange the two phases on the main switch
	Oil in hydraulic unit is not sufficient	Add hydraulic oil (see oil specifications)
	UP-button is faulty	Replace UP-button
	Suction filter of pump is dirty	Check and clean if needed
	Lift raises with light load but not with heavy load	Contact authorized service engineer
	Emergency lowering valve does not close	Tighten emergency lowering valve
Lifting capacity is not sufficient	Pressure control valve not properly set	Adjust pressure control valve
	Pump is faulty	Check pump and replace if necessary

Trouble shooting chart - continued

Symptom:	Possible cause:	Solution:
Lift does not lower when DOWN-button is activated	Lowering solenoid valve does not work	Check that valve is powered and that solenoid coil is not damaged (replace if needed)
	Flow restricting valve in cylinder does not work properly	Check and clean if dirty or replace if defective
	DOWN button is faulty	Replace DOWN button
	Circuit board does not work properly	Replace circuit board
Lift lowers too slowly with normal load	Oil viscosity too high (possibly because of too low room temperature)	Replace oil according to oil specifications
	Flow restricting valve in cylinder does not work properly	Check and clean if dirty or replace if defective
Lift does not run smoothly	Presence of air in hydraulic system	Bleed hydraulic system
	Leakage in hydraulic hoses or hydraulic connections	Check that connections are properly tightened and that hoses are not damaged (replace if needed).
Lift very noisy during raising and lowering	Missing/insufficient lubrication	Lubricate all hinges and movable parts (incl. piston rod) with oil
Lift stops during raising and lowering	Too big difference in level between platforms	Contact authorized service engineer

11. Service**11.1 Spare parts ordering**

To ensure correct deliveries of spare parts orders, please always state the following information: part number, designation, quantity (in the spare parts list) and serial number and year of manufacturing (on the name plate) of the lift.

12. Oil specifications


	- Semi-hydraulic lift (oil in lift cylinder)	- Full-hydraulic lift - High-pressure No lift - 4-post hydraulic lift - Mistral H - Multiflex	- Scissor lift (3T) - 2-post hydraulic surface-mounted - Micro 20/26	Lubrication oil for high-pressure lift
Additives:	Anti-foam, anti-corrosion, anti-oxidation			
Other characteristics:	Water-separating			
Viscosity: (cSt=mm ² /s)	75-120 cSt (40°C)	215 cSt (0°C) 32 cSt (40°C)	140 cSt (0°C) 22 cSt (40°C)	65 - 110 (40°C)
Viscosity index:	Min. 90	150	90	min. 70
Pour point:	Max. -10°C	Max. -10°C	Max. -10°C	Max. -10°C
ARAL	Aral vitam gf 100			Aral konit 30
AVIA	Abilub hydr.oil rsl 100			Avilub mk 2000
BP	Energol hlp 100	Bratran hv 32/shf 32	Bartran hv 22	Vannellus m 2030
CHEVRON	Hydraulic oil 100	Mechanism lps 32		EP industrial oil 68
GALP	Hidrolep 100			NR 30
ESSO STATOIL	Nuto hp 100	Hydraway hv 32	Hydraway hv 22	Protectway 32
FINA	Hydran tsx 100	Hydran ts 32	Hydran ts 22	Arusan 30
GULF - Q8	Q8 haydn 100	Q8 haydn 32	Q8 haydn 22	Q8 wagner 68
MOBIL	Mobil dte 18	Mobil dte 24	Mobil dte 22	Mobilarma 524
NYNÄS	Td 39 ex			Td 31 ex
OK	Ok hydraulic oil 65	Super hydr. oil 32		Ultima eph 68
SHELL	Tellus oil (S) 100	Tellus oil 32	Tellus oil 22	Remula x 20 w
NOROL	Hydraulikolje hm 100			Lagringsolje sae 20
TEXACO	Rando oil 150	Rando oil hd 32	Rando oil hd 22	Regal oil R&O 100
IGOL	Sonhodro 100 / hydro 30			Relax
VALVOLINE	Ultramax hlp 100	Ultramax hvlp 32	Ultramax hvlp 22	Ultramax hlp 68
SUNOCO	Sonvis 8100 wr 100	Sunvis 832 wr-hv	Sunvis 822 we-hv	Sunfill 2630
CASTROL	Hyspin aws/awh 100	Hyspin awh 32	Hyspin aws 22	Rustilo 652


13 Overview: Electrical diagrams


13.1 T50542: Electrical diagram 230-400/3/50 (24V)

14 Overview: Hydraulic diagrams

14.1 T61050 - Hydraulic diagram

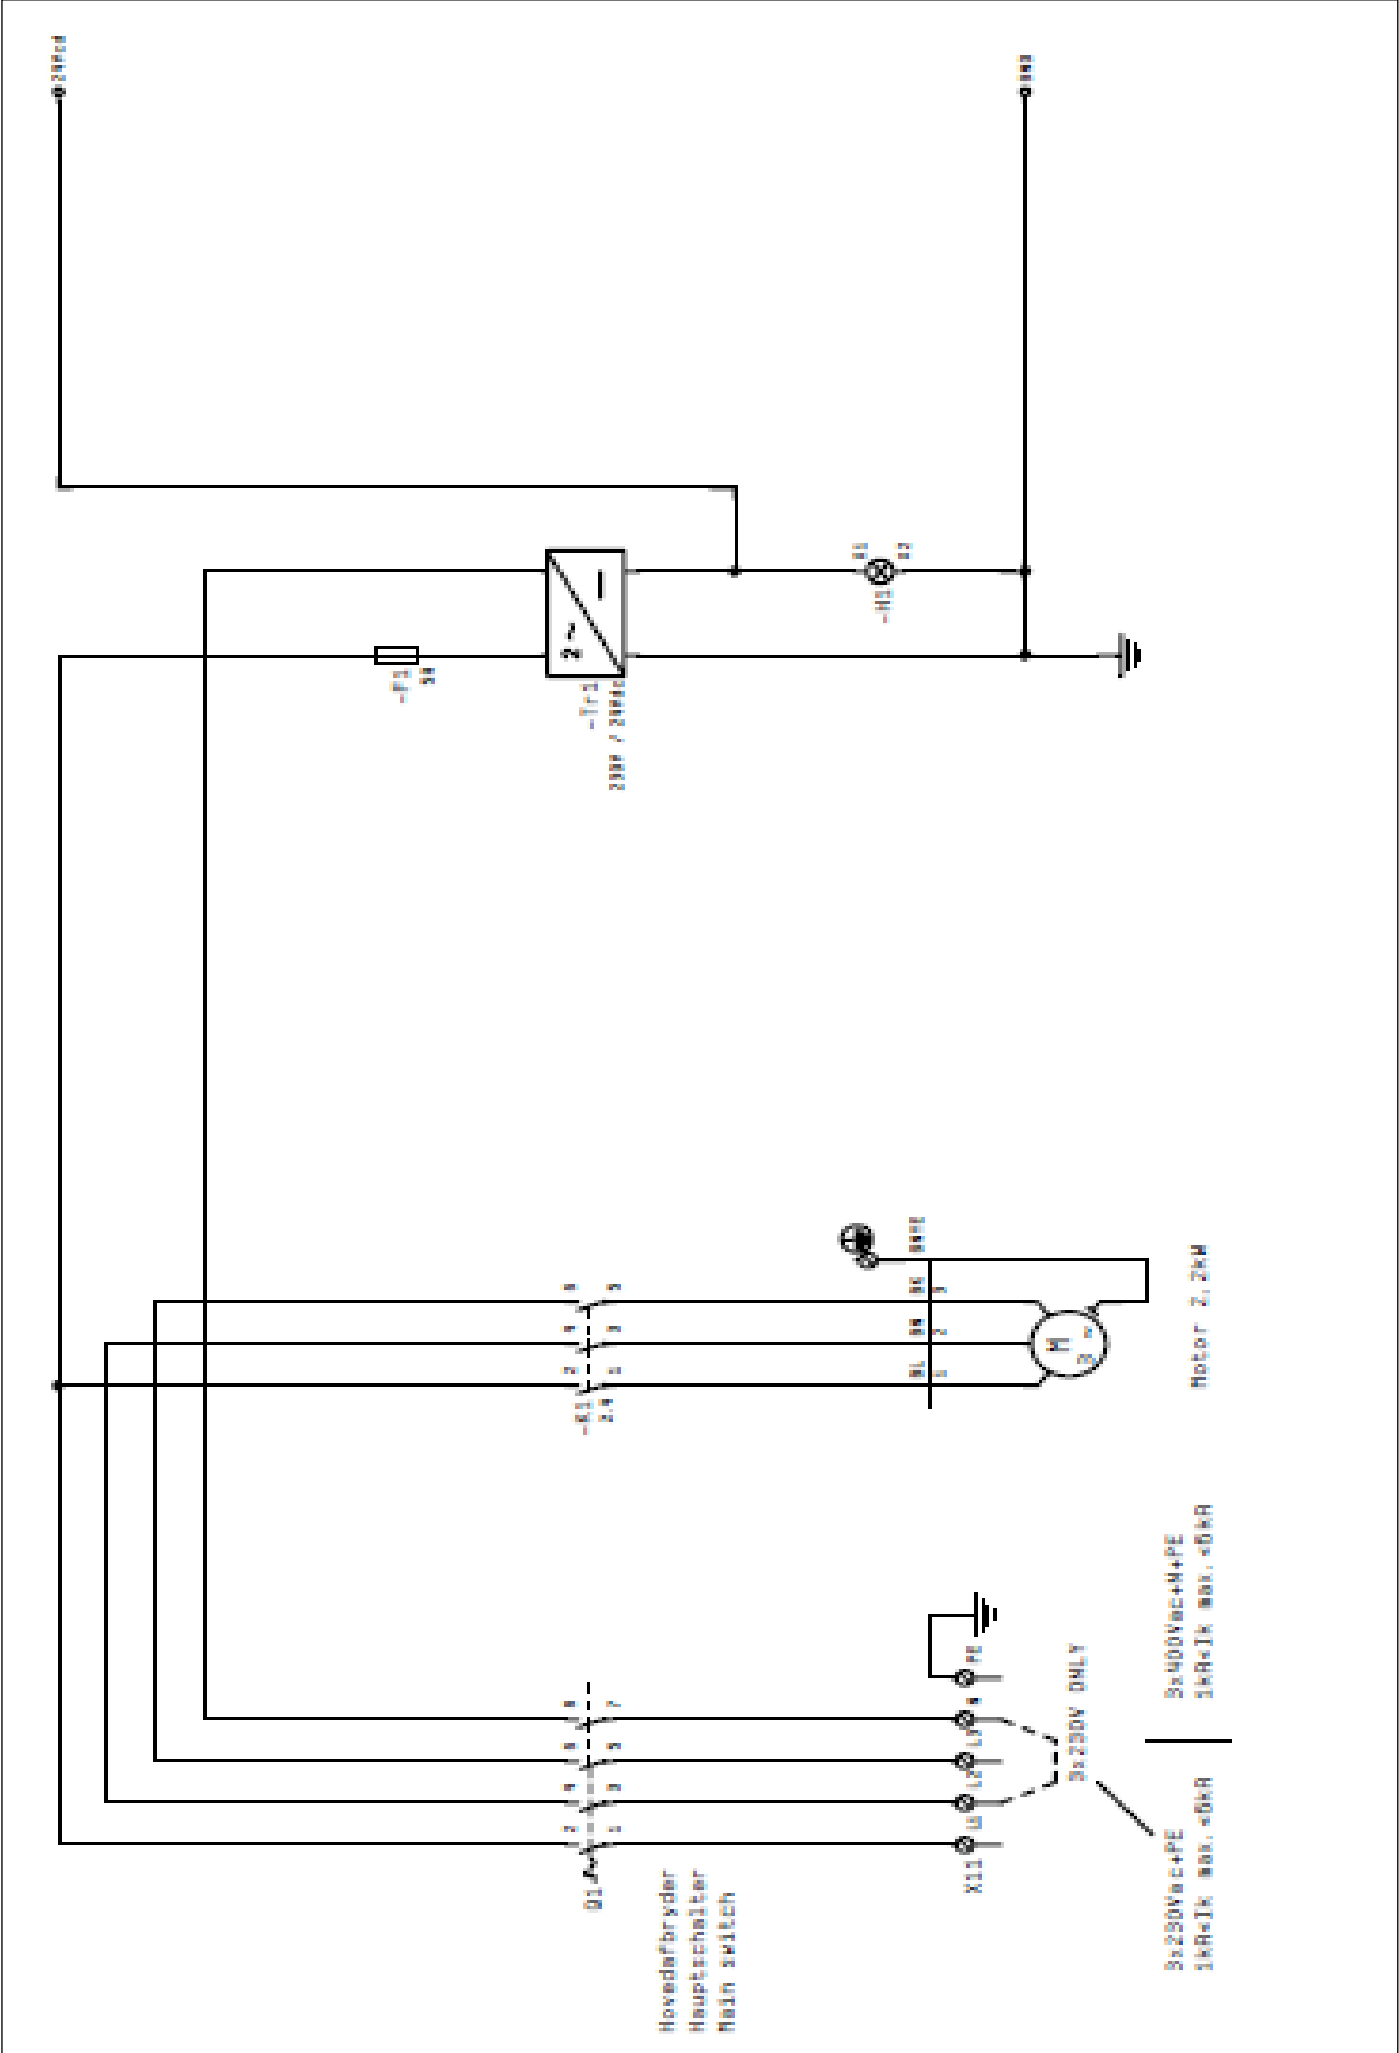

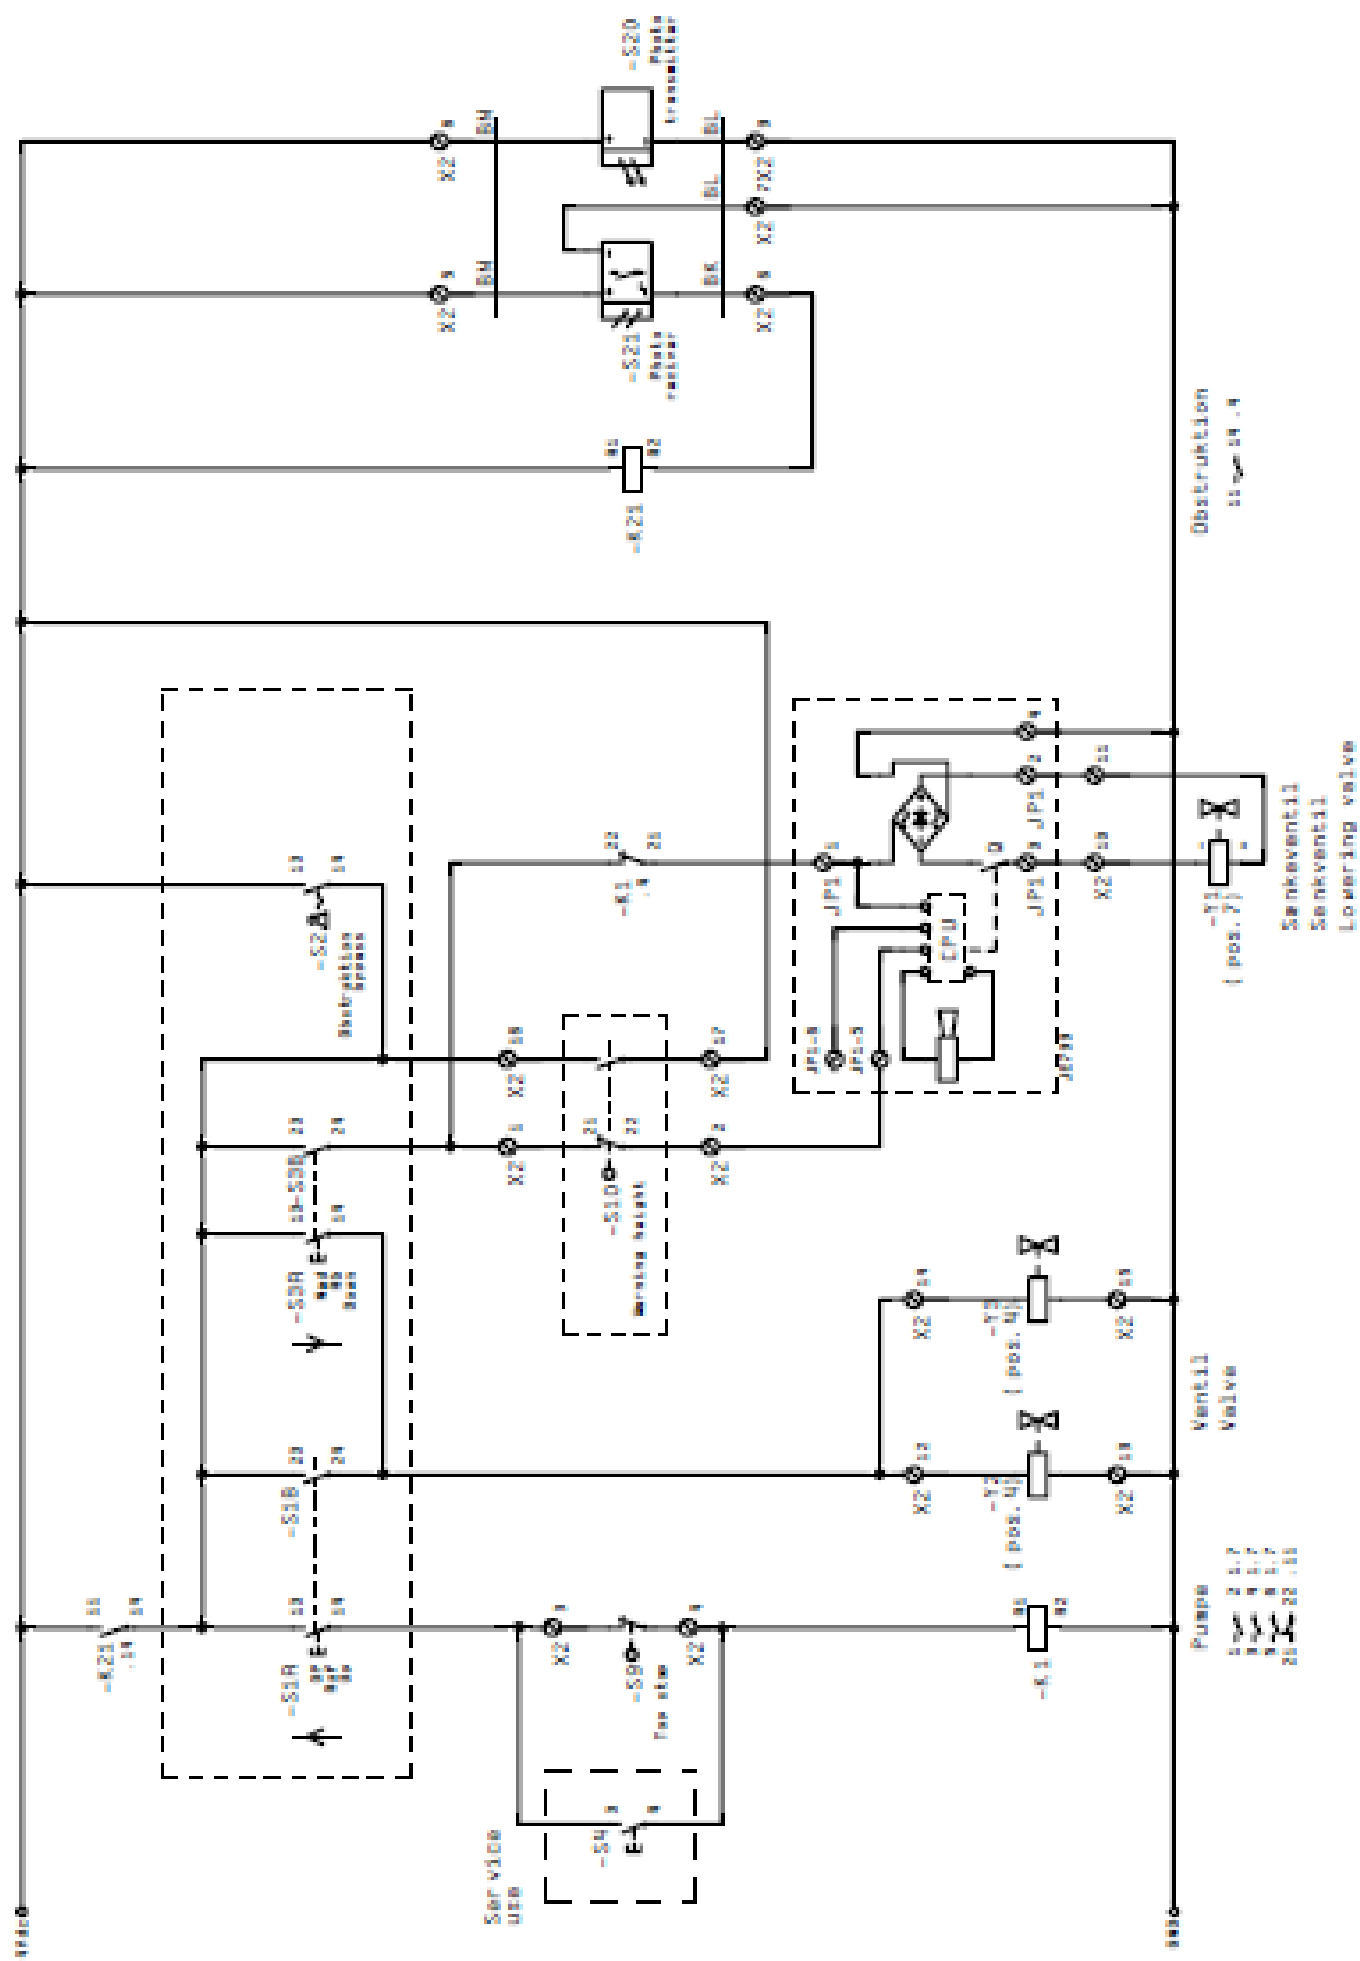

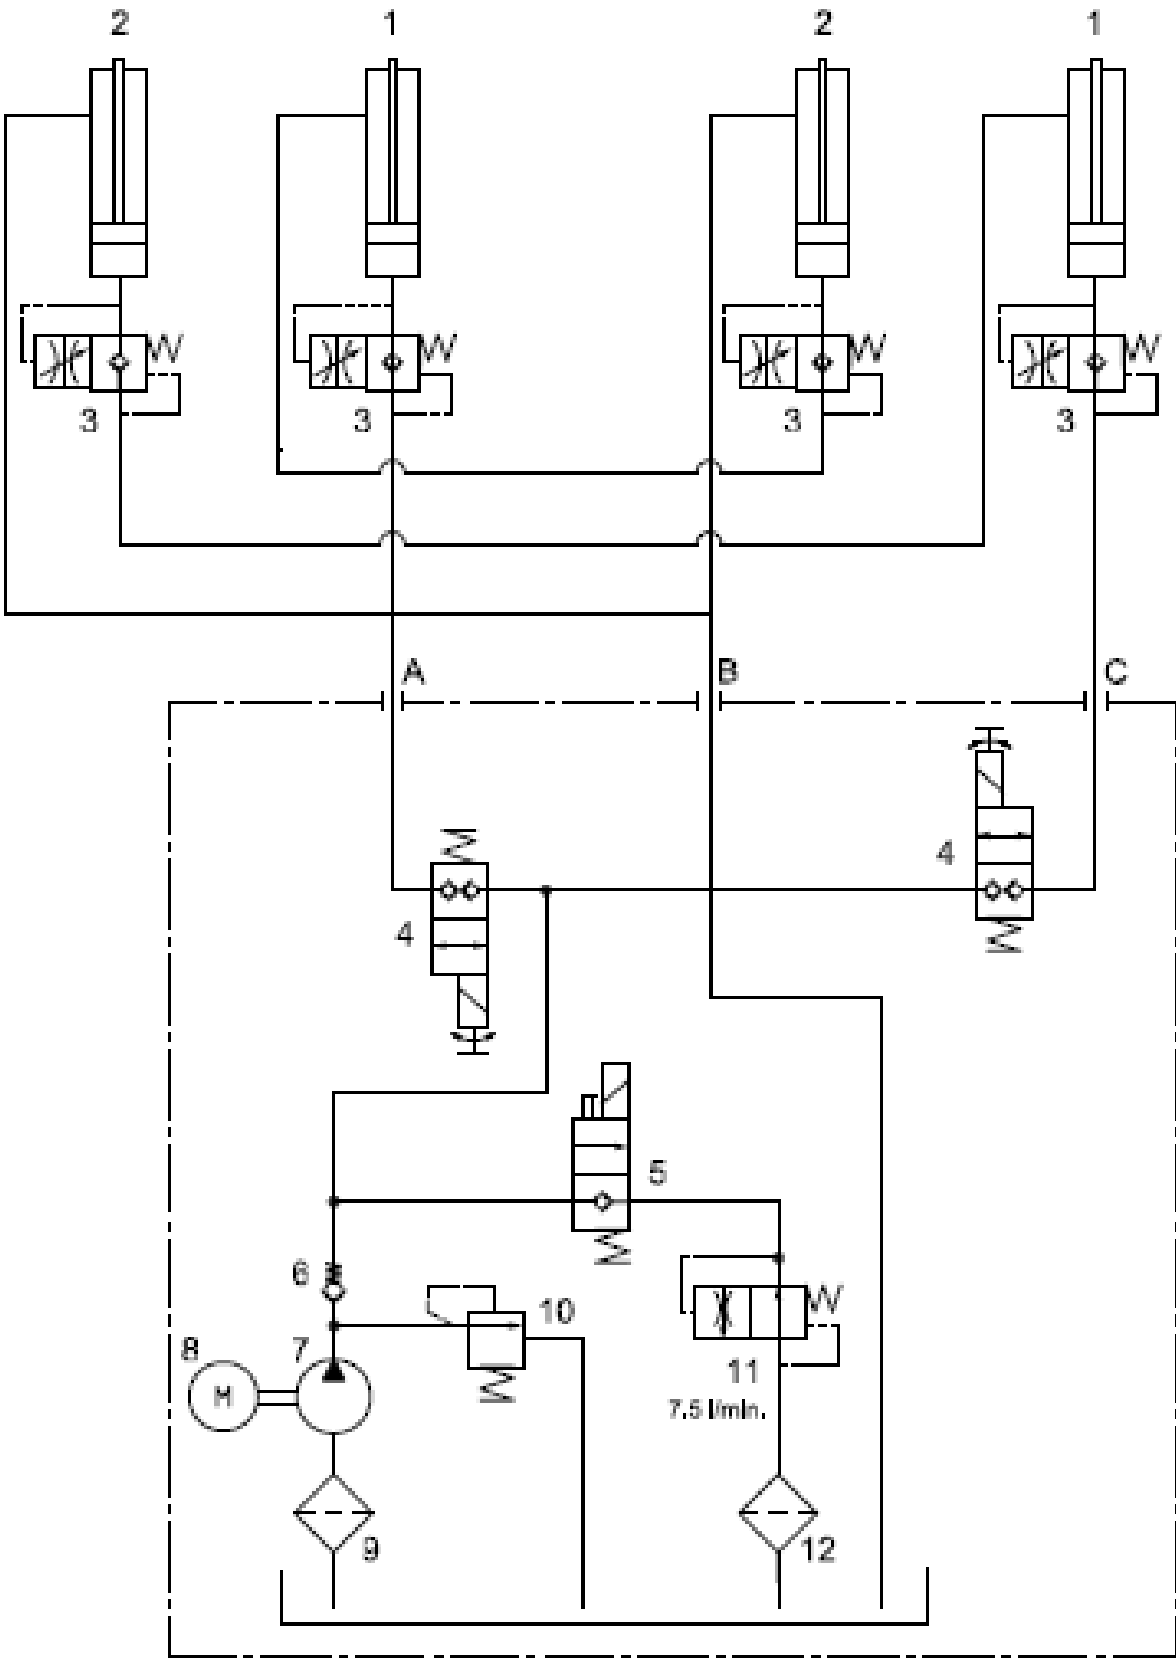

1. Master cylinder
2. Slave cylinder
3. Hose break valve
4. Electromagnetic valve w/ Emergency lowering
5. Lowering valve w/ emergency lowering
6. Chek valve (incl. Pos. 10)
7. Pump
8. Motor
9. Filter
10. Overflow control valve
11. Flow restricting valve
12. Oil return filter